



EVACUATION DIAGRAM

Greater Dandenong Operations Centre (GDOC)

22-30 Bennet St Dandenong VIC 3175

Workshop - Ground Floor



IN CASE OF FIRE
R REMOVE PEOPLE FROM IMMEDIATE DANGER
A ALERT FIRE SERVICE
CALL 000
BREAK MANUAL CALL POINT
ADVISE FIRE WARDEN OF LOCATION
C CONFINE FIRE AND SMOKE
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)
E EVACUATE TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3: Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority.)

STAGE 4. ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should evacuate Immediately on hearing the fire alarm assisted by a nominated person.



FCF - FIRE AND ELECTRICAL
1300 323 753
www.fcfnational.com.au
fireevacdiagrams.fcfnational.com.au

DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027

LEGEND



PRIMARY ROUTE



SECONDARY ROUTE



DESIGNATED EXIT



ASSEMBLY AREA



FIRE EXTINGUISHER



FIRE HOSE REEL



FIRE HYDRANT



FIRE BLANKET



MANUAL CALL POINT



FIRST AID KIT



EYE WASH


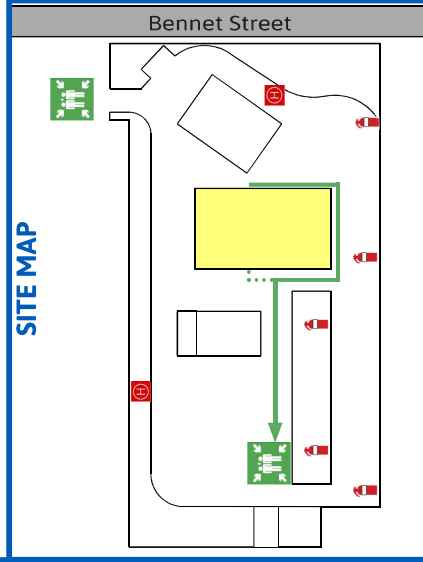


DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010

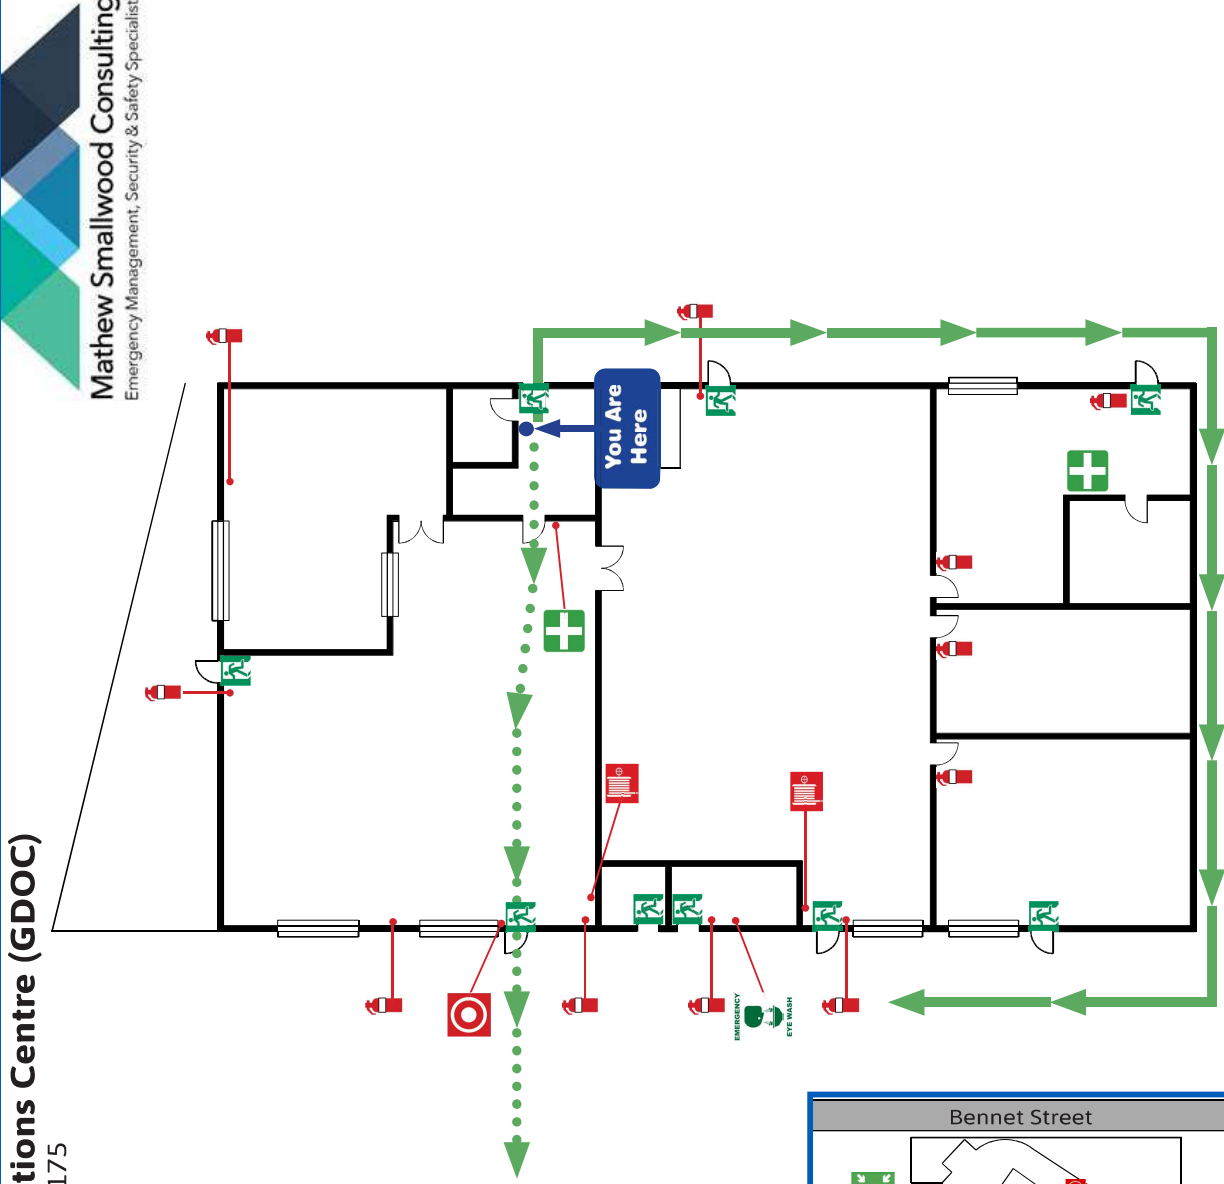


EVACUATION DIAGRAM


Greater Dandenong Operations Centre (GDOC)

22-30 Bennet St Dandenong VIC 3175

Workshop - Ground Floor

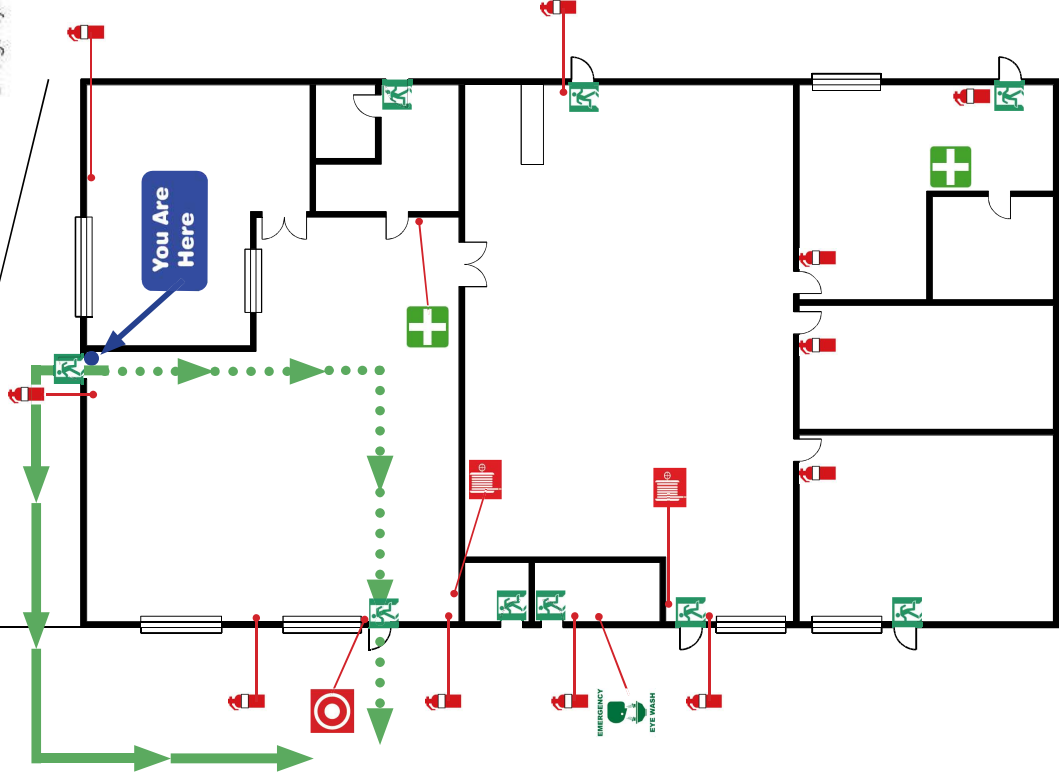

SITE MAP

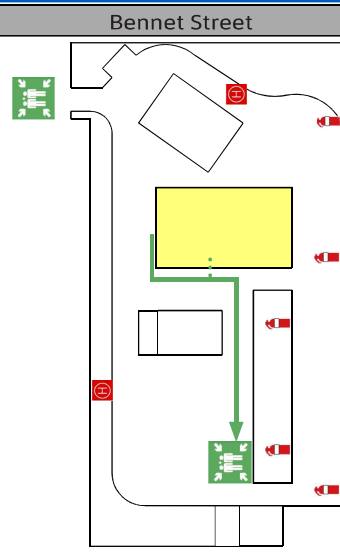

IN CASE OF FIRE

R REMOVE PEOPLE
FROM IMMEDIATE DANGER

A ALERT FIRE SERVICE
CALL 000
BREAK MANUAL CALL POINT
ADVISE FIRE WARDEN OF LOCATION

C CONFINE FIRE AND SMOKE
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)

E EVACUATE
TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3: Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority)

STAGE 4: ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should evacuate immediately on hearing the fire alarm assisted by a nominated person.



LEGEND



DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010



EVACUATION DIAGRAM

Greater Dandenong Operations Centre (GDOC)

22-30 Bennet St Dandenong VIC 3175

Workshop - Ground Floor



IN CASE OF FIRE

R REMOVE PEOPLE
FROM IMMEDIATE DANGER

A ALERT FIRE SERVICE
CALL 000
BREAK MANUAL CALL POINT
ADVISE FIRE WARDEN OF LOCATION

C CONFINE FIRE AND SMOKE
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)

E EVACUATE
TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3: Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority.)

STAGE 4. ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should evacuate immediately on hearing the fire alarm assisted by a nominated person.



FCF - FIRE AND ELECTRICAL
1300 323 753
www.fcfnational.com.au

DATE OF INSTALLATION:
JULY 2022

REVIEW DATE: JULY 2027

In an emergency dial 000



PRIMARY
ROUTE



SECONDARY
ROUTE



DESIGNATED
EXIT



ASSEMBLY
AREA



FIRE
EXTINGUISHER



FIRE HOSE
REEL



FIRE HYDRANT



FIRE BLANKET





MANUAL CALL
POINT



FIRST AID KIT



EYE WASH

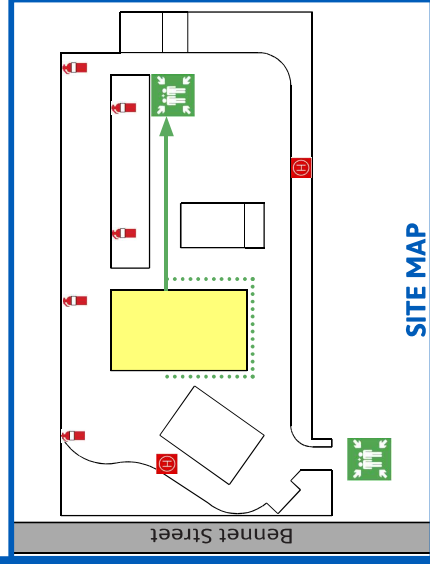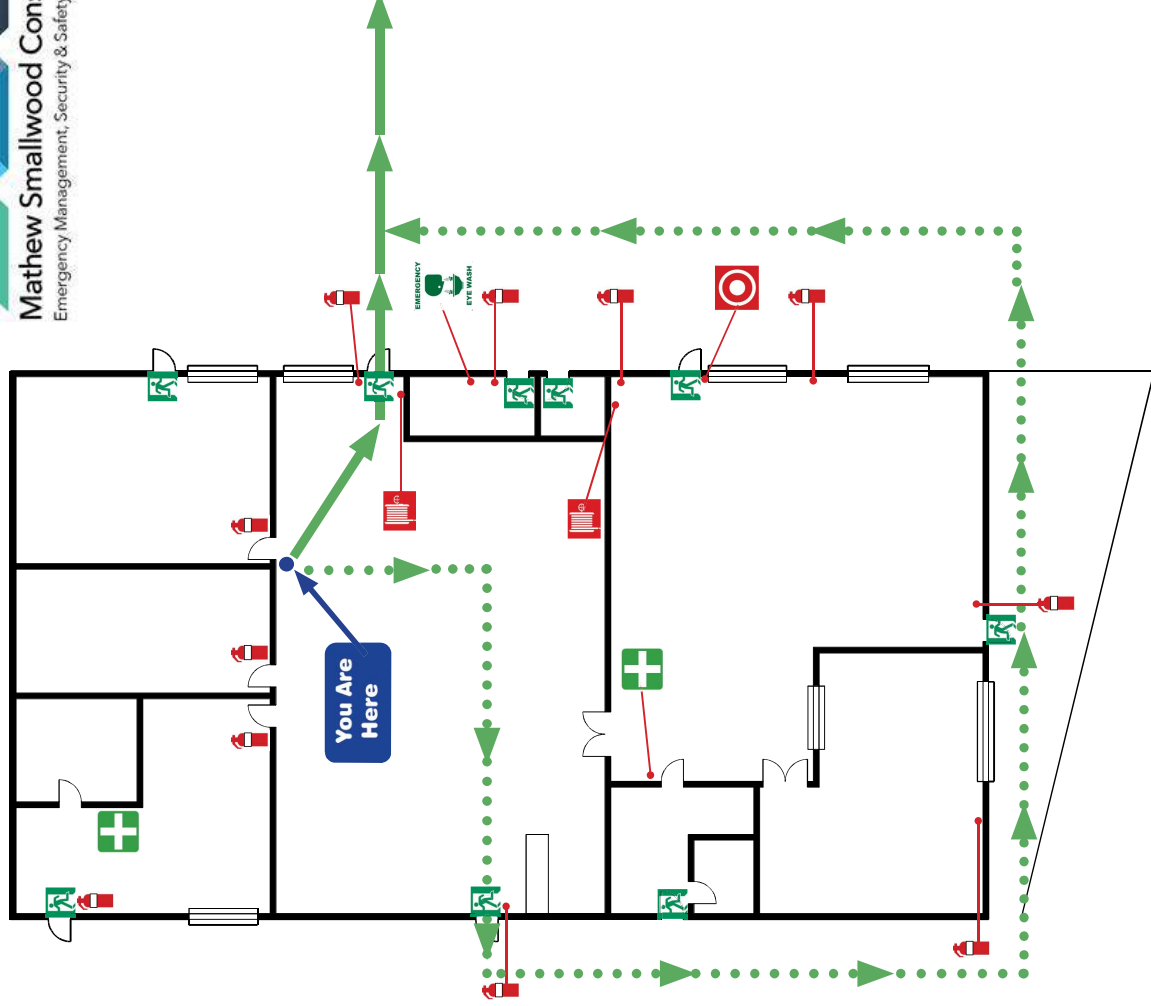

SITE MAP

LEGEND

DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010



EVACUATION DIAGRAM

Greater Dandenong Operations Centre (GDOC)

22-30 Bennet St Dandenong VIC 3175

Workshop - Ground Floor



IN CASE OF FIRE
R REMOVE PEOPLE FROM IMMEDIATE DANGER
A ALERT FIRE SERVICE
CALL 000
BREAK MANUAL CALL POINT
ADVISE FIRE WARDEN OF LOCATION
C CONFINE FIRE AND SMOKE
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)
E EVACUATE TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3: Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority)

STAGE 4: ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should evacuate Immediately on hearing the fire alarm assisted by a nominated person.



FCF - FIRE AND ELECTRICAL

1300 323 753

www.fcfnational.com.au

freeevacdiagrams@fcfnational.com.au

DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027



DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010

LEGEND



PRIMARY ROUTE



SECONDARY ROUTE



DESIGNATED EXIT



ASSEMBLY AREA



FIRE EXTINGUISHER



FIRE HOSE REEL



FIRE HYDRANT



FIRE BLANKET




MANUAL CALL POINT




FIRST AID KIT



EYE WASH

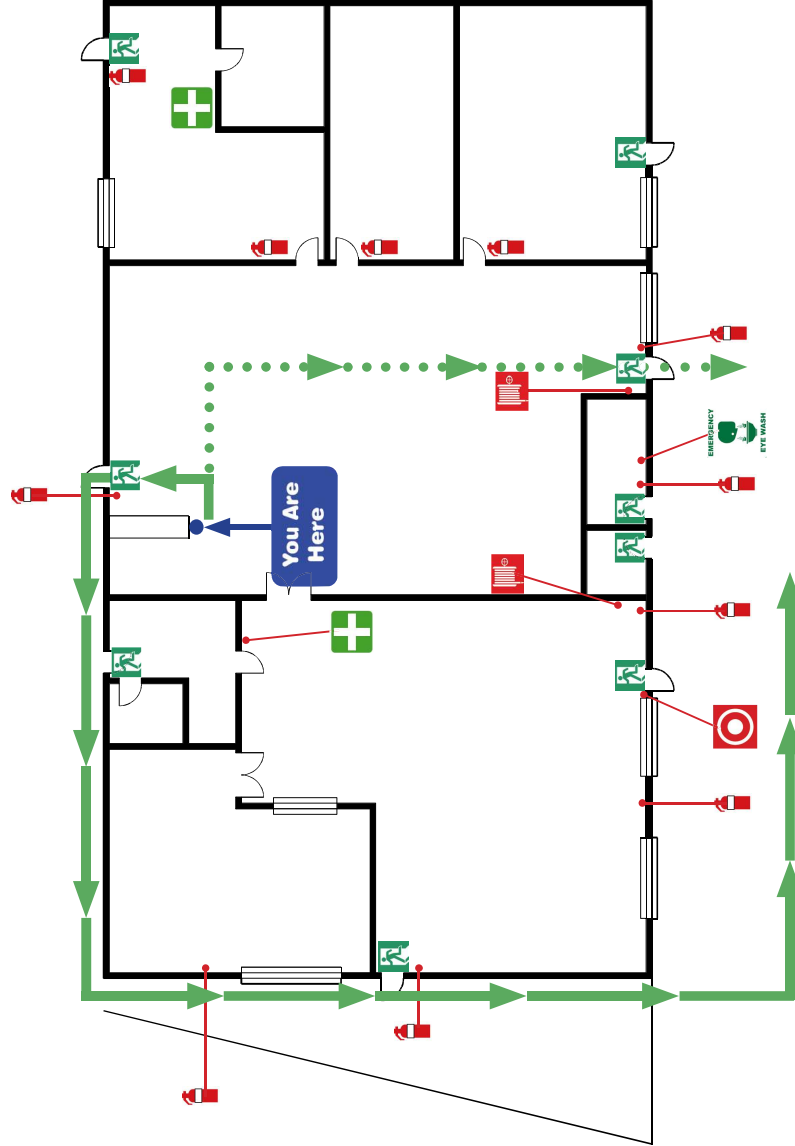

SITE MAP


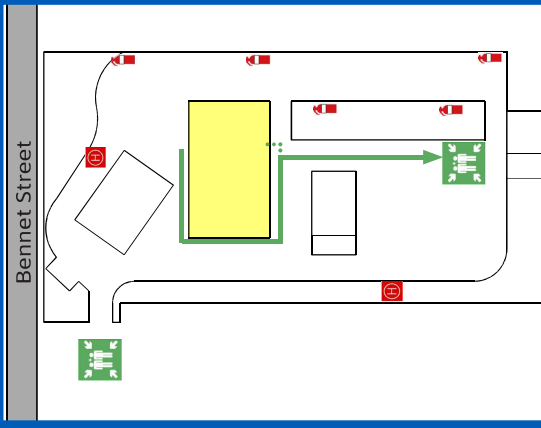




22-30 Bennet St Dandenong VIC 3175



Mathew Smallwood Consulting
Emergency Management, Security & Safety Specialists

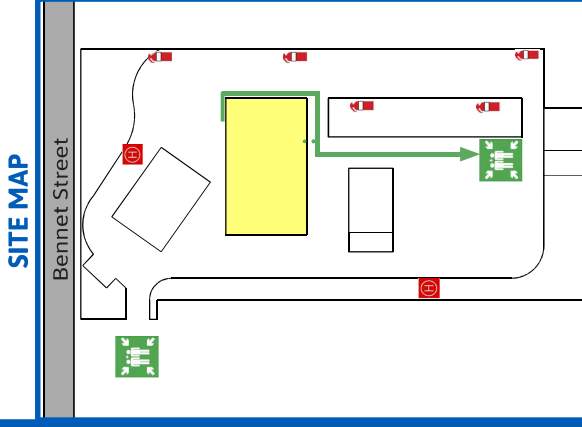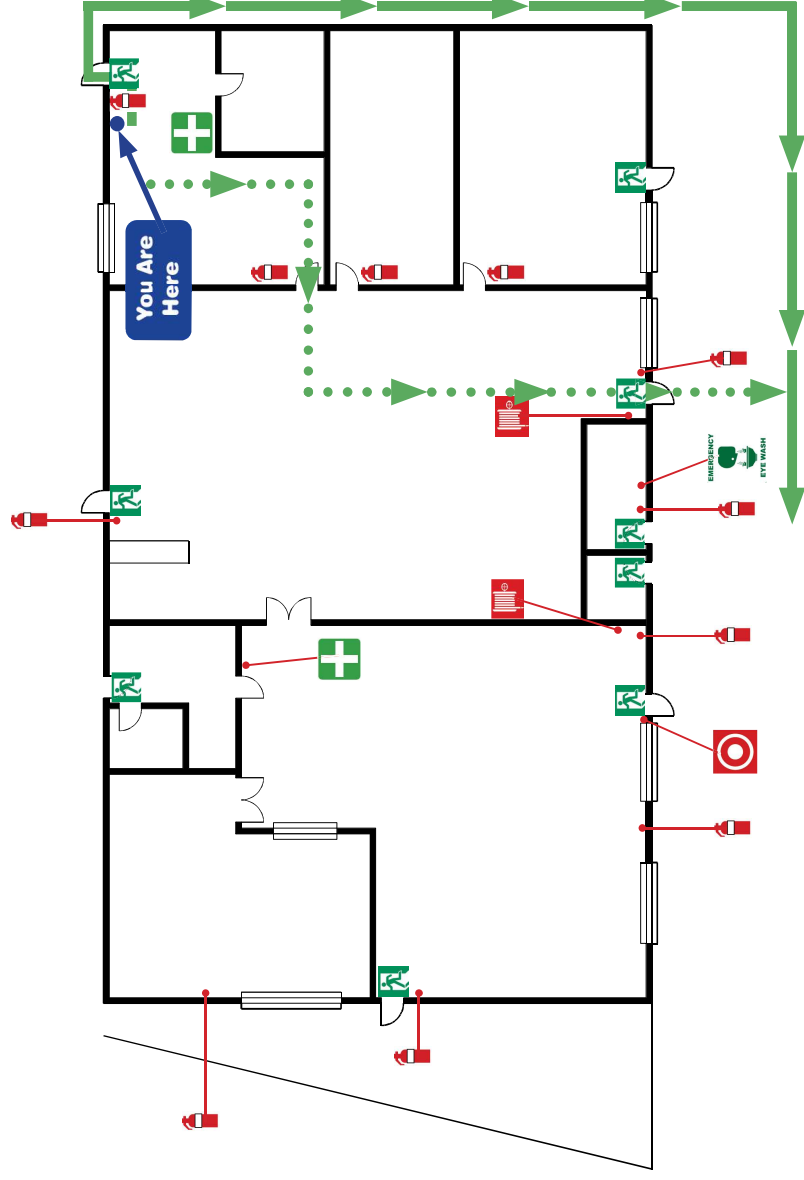

R REMOVE PEOPLE FROM IMMEDIATE DATA

ALERT FIRE SERVICE

- ➔ CALL 000
- ➔ BREAK MANUAL CALL POINT
- ➔ ADVISE FIRE WARDEN OF LOCATION

C **CONFINE FIRE AND SMOKE**
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)

EVACUATE

TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3. Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority.)

STAGE 4. ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should
Immediately on hearing the fire alarm
assisted by a nominated person.



FCF - FIRE AND ELECTRICAL
1300 323 753
www.fcfnational.com.au

DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027



DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010





EVACUATION DIAGRAM

Greater Dandenong Operations Centre (GDOC)

22-30 Bennet St Dandenong VIC 3175

Operations Centre - Ground Floor



IN CASE OF FIRE

R REMOVE PEOPLE
FROM IMMEDIATE DANGER

A ALERT FIRE SERVICE
CALL 000
BREAK MANUAL CALL POINT
ADVISE FIRE WARDEN OF LOCATION

C CONFINE FIRE AND SMOKE
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)

E EVACUATE
TO THE ASSEMBLY AREA

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area
Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3: Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority)

STAGE 4: ROLL CALL

To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



Mobility Impaired persons should evacuate immediately on hearing the fire alarm assisted by a nominated person.




FCF - FIRE AND ELECTRICAL
1300 323 763
www.fcfnational.com.au
freeevacdiagrams@fcfnational.com.au


DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027

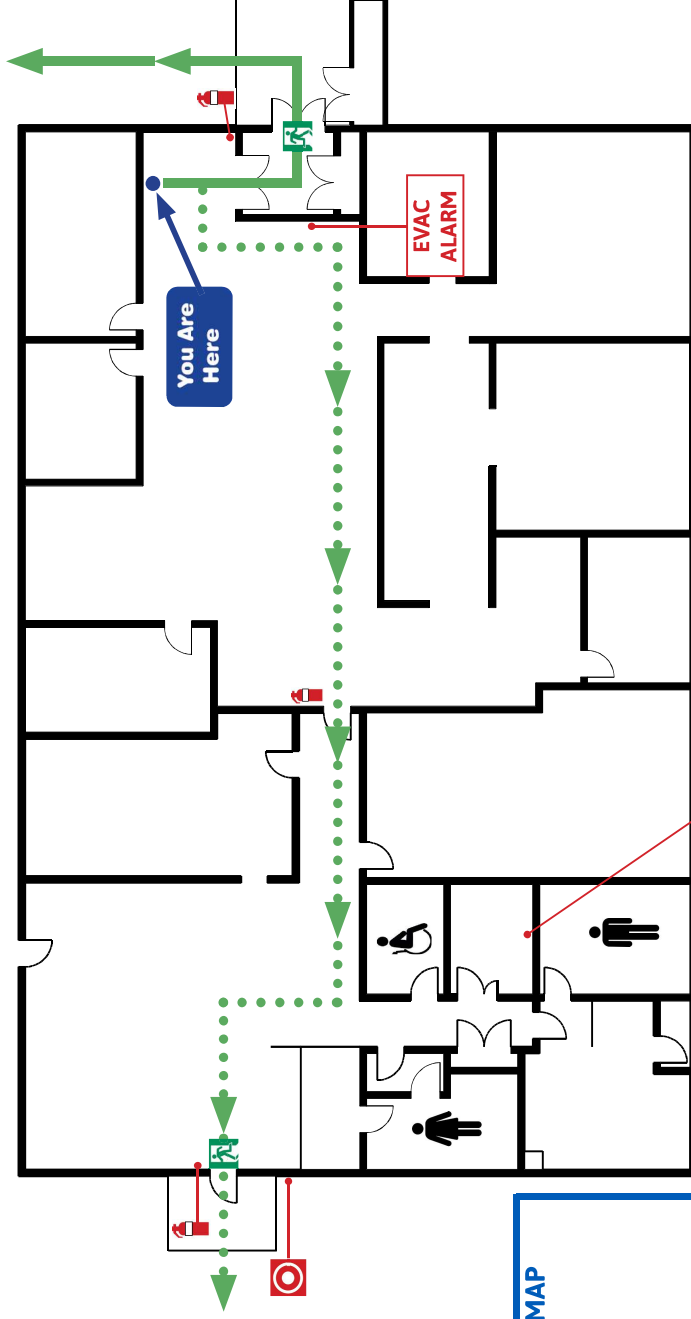

SITE MAP

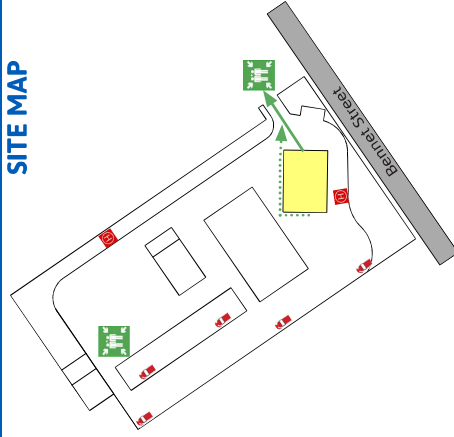


LEGEND



DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010



22-30 Bennet St Dandenong VIC 3175
Operations Centre - Ground Floor

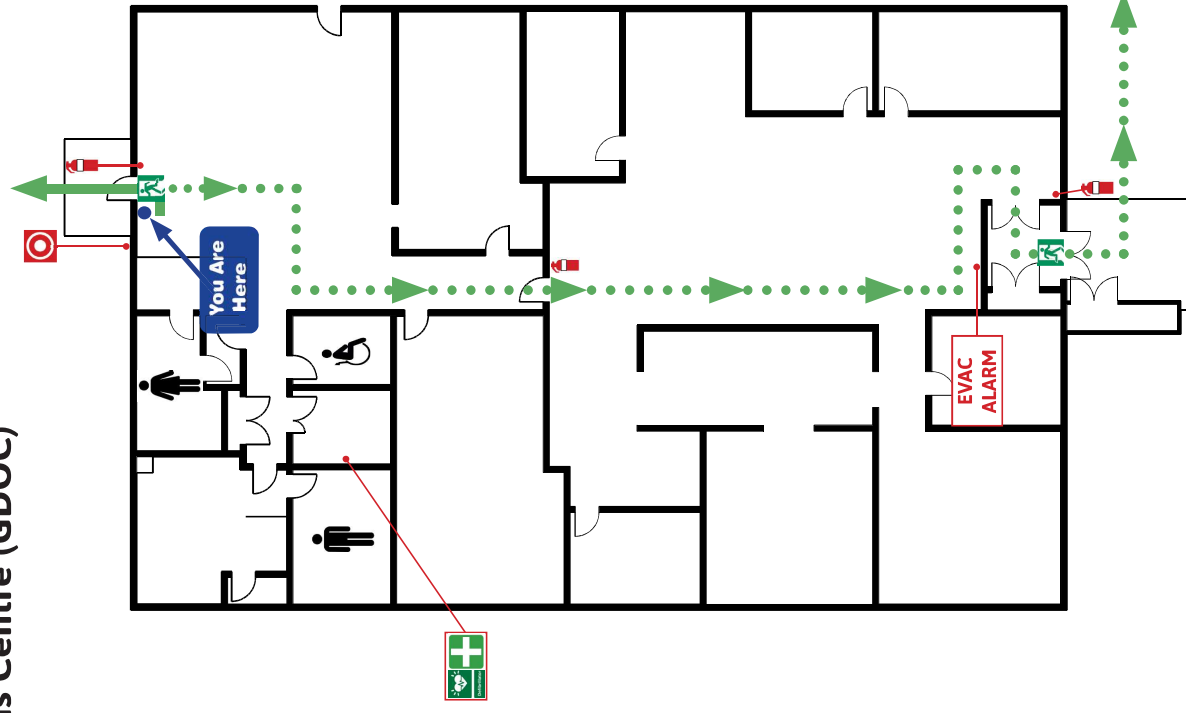

REMOVE PEOPLE FROM IMMEDIATE DATA

- ➔ CALL 000
- ➔ BREAK MANUAL CALL POINT
- ➔ ADVISE FIRE WARDEN OF LOCATION

C **CONFINE FIRE AND SMOKE**
CLOSE DOORS AND WINDOWS
(IF SAFE TO DO SO)

E **EVACUATE**
TO THE ASSEMBLY

EVACUATION PROCEDURE

STAGE 1: Removal of people from Immediate Danger Area


Occupants and staff in the immediate danger area are to assemble a safe distance away from the fire and smoke. When the area has been evacuated all doors and windows should be closed to contain fire.

STAGE 2: Removal To Safe Area
If the severity of the smoke or fire warrants further evacuation, occupants should be moved through fire/smoke doors to a safe area.

STAGE 3. Complete Evacuation of Entire Complex
Should the emergency necessitate evacuation of the whole building, the Manager or the Fire Service will direct occupants from the safe place to the ASSEMBLY AREA. (Do not Re-enter the Building until Clearance is Given by Authority.)

STAGE 4: ROLL CALL

 To be conducted as soon as possible and ensure all Persons are accounted for. Report all missing persons to **FIRE OFFICERS**.



FCF - FIRE AND ELECTRICAL
1300 323 753
www.fcfnational.com.au

DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027



AID KIT



MANUAL CALL POINT



FIRE HYDRANT


FIRE HOSE

ABE FIRI



DESIGNATED




SECONDARY



PRIMARY ROUTE



SITE MAP

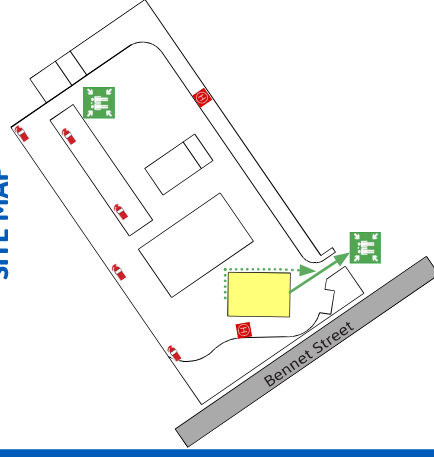

LEGEND

DIAGRAM COMPLIES WITH THE MINIMUM ELEMENTS OF SECTION 3.5.5 OF AS3745:2010

Mobility Impaired persons should evacuate Immediately on hearing the fire alarm assisted by a nominated person.

FCF - FIRE AND ELECTRICAL
1300 323 753
www.fcfnational.com.au

DATE OF INSTALLATION:

JULY 2022

REVIEW DATE: JULY 2027